




WOOD CLEANER SPRAY 400ML



USE!
SAFETY GEAR

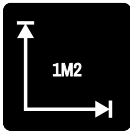

THEORETICAL
COVERAGE
1M2

Maston Wood Cleaner Spray is an effective wood deep-cleaning agent that removes greying, stains, and ingrained dirt from wooden surfaces. It restores the wood's natural colour and prepares the surface for further treatment such as oiling, painting, or varnishing. Especially suitable for outdoor use on furniture, small decks, and other untreated or previously treated wooden surfaces before refinishing. For all wood types.

Always wear protective gloves and safety glasses, and work outdoors or in a well-ventilated area. For best results, apply in dry weather and avoid direct sunlight. Cover surrounding surfaces, as the product may damage sensitive materials. Test the product first on an inconspicuous area.

STORAGE STABILITY: 36 months

SIZE: 400ml

SALES QTY:
400ml: 6 pcs

USAGE INSTRUCTIONS:

How to use

1. Preparation

- Cover surrounding areas and surfaces.
- Wear safety glasses and gloves.
- Shake the can well before use.

2. Application

- Spray evenly onto the wooden surface from a distance of approximately 30–50 cm.
- Allow the product to act for about 10–20 minutes depending on the degree of greying and dirt.
- Do not let the surface dry during the reaction time – lightly moisten again if necessary.
- Repeat the treatment if heavy greying remains.

3. Cleaning

- Scrub the surface with a soft brush or sponge.
- Wipe with wet cloth
- Alternatively, you can rinse with a pressure washer.
- Allow to dry completely before further treatment.

MATERIAL



WOOD



IN AND OUT



COVER AREA



SHAKE



30-50CM
SPRAY DISTANCE



WAIT
10-20 MIN

WAIT



CLEAN WITH BRUSH
OR CLOTH



WIPE WITH
WET CLOTH

WIPE



IF NECESSARY
REPEAT



ACID BASED CLEANER

MASTON Wood Cleaner Spray 400ml

Art. No.	MASTON Wood Cleaner Spray 400ml	Color	Barcode
605600	Maston Wood Cleaner Spray 400ml	○	6412490048358